


CMAG installation for Pumped or Gravity Condensate with bypass where piping is not always full

CMAG “Wet Leg” install with “Y” strainer, Isolation Valves, and Straight through clean with “T” bottom Leg

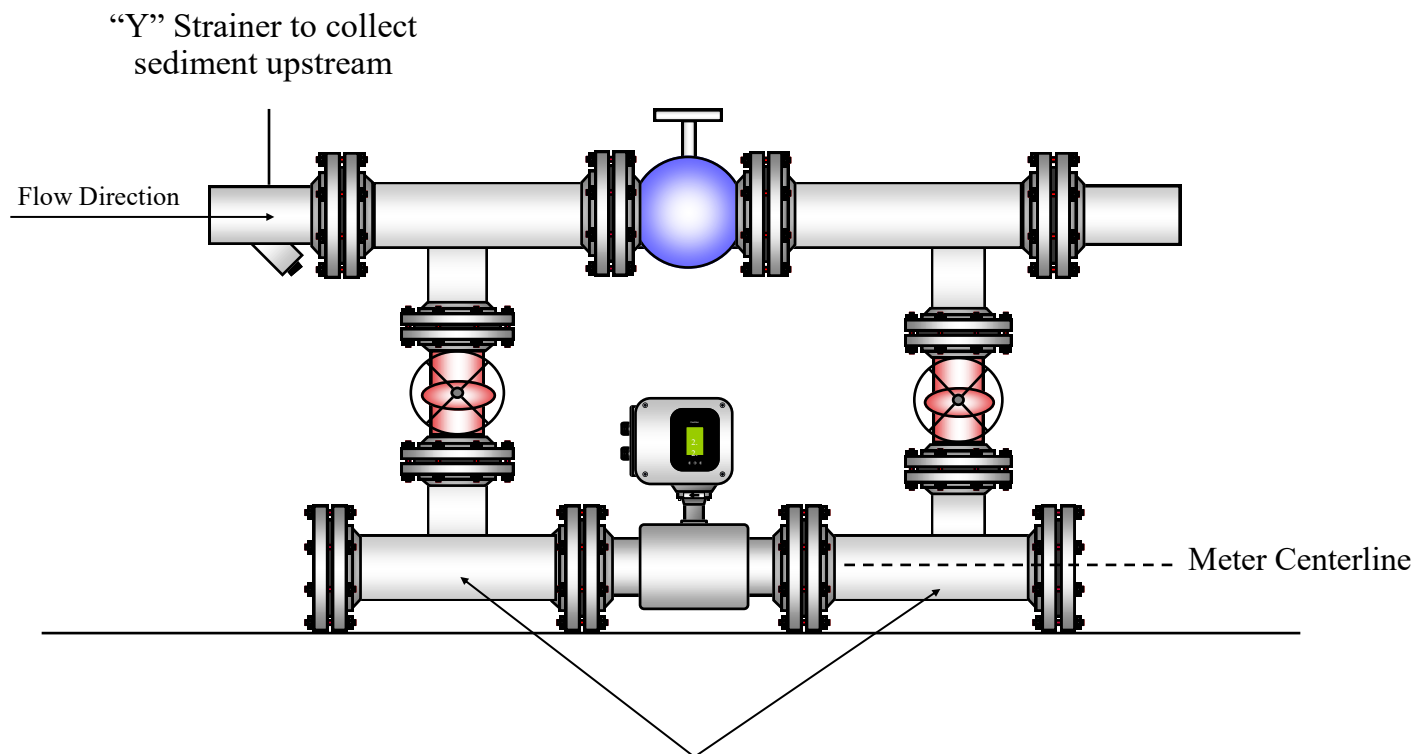

Tee's added to bottom of “Wet Leg” for easy cleaning of sediment buildup in flow tube and piping