


CMAG installation for Pumped or Gravity Condensate where piping is not always full

CMAG “Wet Leg” install with “Y” strainer, air bleed,
and Straight through clean with “T” bottom Leg

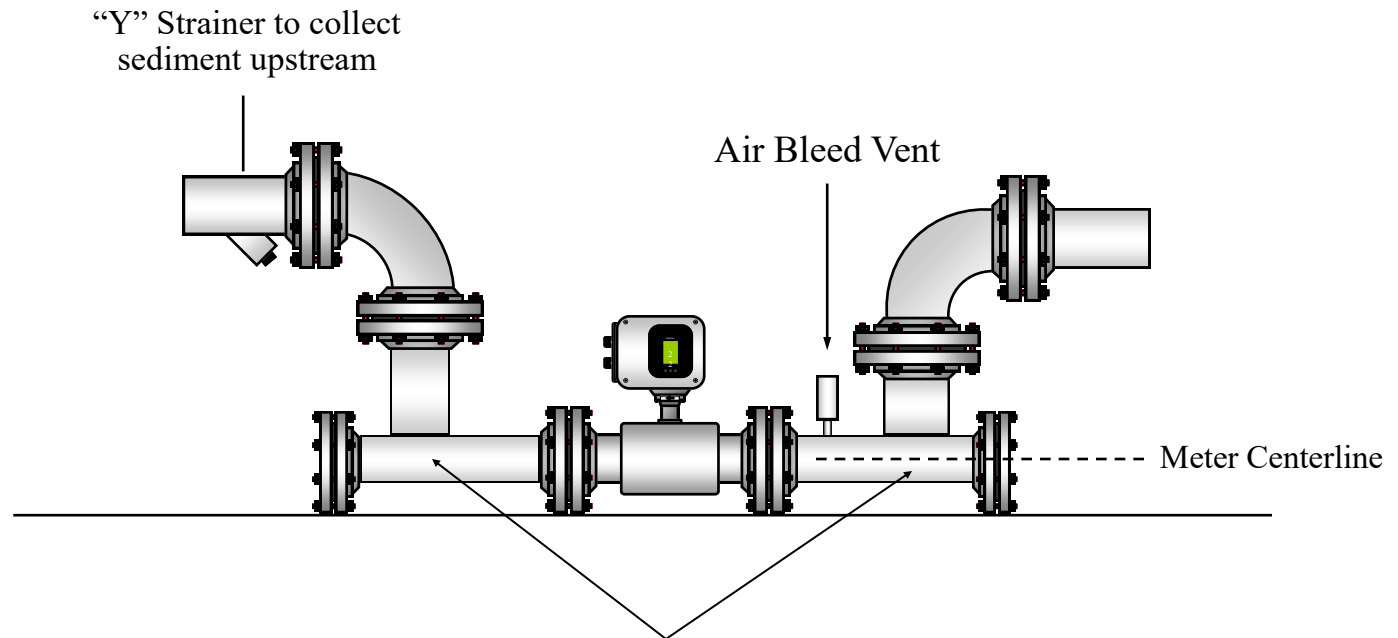

Tee's or flanged straight sections added to bottom of reduced line size “Wet Leg” for easy cleaning of sediment buildup in flow tube and piping